

***Strata***<sup>®</sup> ***CTX***

Digital Business Telephone Systems

# **CTX Attendant Console User Guide**

---

## **Publication Information**

Toshiba America Information Systems, Inc., Telecommunication Systems Division, reserves the right, without prior notice, to revise this information publication for any reason, including, but not limited to, utilization of new advances in the state of technical arts or to simply change the design of this document.

Further, Toshiba America Information Systems, Inc., Telecommunication Systems Division, also reserves the right, without prior notice, to make such changes in equipment design or components as engineering or manufacturing methods may warrant.

CTX-UG-ATCON-VB  
4016232

Version B, March 2003

---

## **© Copyright 2003**

### **Toshiba America Information Systems, Inc. Telecommunication Systems Division**

All rights reserved. No part of this manual, covered by the copyrights hereon, may be reproduced in any form or by any means—graphic, electronic, or mechanical, including recording, taping, photocopying, or information retrieval systems—without express written permission of the publisher of this material.

Strata is a registered trademark of Toshiba Corporation.  
Stratagy is a registered trademark of Toshiba America Information Systems, Inc.

Trademarks, registered trademarks, and service marks are the property of their respective owners.

## **TOSHIBA AMERICA INFORMATION SYSTEMS, INC. ("TAIS") Telecommunication Systems Division License Agreement**

IMPORTANT: THIS LICENSE AGREEMENT ("AGREEMENT") IS A LEGAL AGREEMENT BETWEEN YOU ("YOU") AND TAIS. CAREFULLY READ THIS LICENSE AGREEMENT. USE OF ANY SOFTWARE OR ANY RELATED INFORMATION (COLLECTIVELY, "SOFTWARE") INSTALLED ON OR SHIPPED WITH A TAIS TELECOMMUNICATION SYSTEM PRODUCT OR OTHERWISE MADE AVAILABLE TO YOU BY TAIS IN WHATEVER FORM OR MEDIA, WILL CONSTITUTE YOUR ACCEPTANCE OF THESE TERMS, UNLESS SEPARATE TERMS ARE PROVIDED BY THE SOFTWARE SUPPLIER. IF YOU DO NOT AGREE WITH THE TERMS OF THIS LICENSE AGREEMENT, DO NOT INSTALL, COPY OR USE THE SOFTWARE AND PROMPTLY RETURN IT TO THE LOCATION FROM WHICH YOU OBTAINED IT IN ACCORDANCE WITH APPLICABLE RETURN POLICIES. EXCEPT AS OTHERWISE AUTHORIZED IN WRITING BY TAIS, THIS SOFTWARE IS LICENSED FOR DISTRIBUTION ONLY TO END-USERS PURSUANT TO THIS LICENSE AGREEMENT.

1. License Grant. The Software is not sold; it is licensed upon payment of applicable charges. TAIS grants to you a personal, non-transferable and non-exclusive right to use the copy of the Software provided under this License Agreement. You agree you will not copy the Software except as necessary to use it on one TAIS system at a time at one location. Modifying, translating, renting, copying, distributing, transferring or assigning all or part of the Software, or any rights granted hereunder, to any other persons and removing any proprietary notices, labels or marks from the Software is strictly prohibited; You agree violation of such restrictions will cause irreparable harm to TAIS and provide grounds for injunctive relief, without notice, against You or any other person in possession of the Software. You and any other person whose possession of the software violates this License Agreement shall promptly surrender possession of the Software to TAIS, upon demand. Furthermore, you hereby agree not to create derivative works based on the Software. TAIS reserves the right to terminate this license and to immediately repossess the software in the event that You or any other person violates this License Agreement.

2. Intellectual Property. You acknowledge that no title to the intellectual property in the Software is transferred to you. You further acknowledge that title and full ownership rights to the Software will remain the exclusive property of TAIS and/or its suppliers, and you will not acquire any rights to the Software, except the license expressly set forth above. You will not remove or change any proprietary notices contained in or on the Software. The Software is protected under US patent, copyright, trade secret, and/or other proprietary laws, as well as international treaties. Any transfer, use, or copying of the software in violation of the License Agreement constitutes copyright infringement. You are hereby on notice that any transfer, use, or copying of the Software in violation of this License Agreement constitutes a willful infringement of copyright.

3. No Reverse Engineering. You agree that you will not attempt, and if you employ employees or engage contractors, you will use your best efforts to prevent your employees and contractors from attempting to reverse compile, reverse engineer, modify, translate or disassemble the Software in whole or in part. Any failure to comply with the above or any other terms and conditions contained herein will result in the automatic termination of this license and the reversion of the rights granted hereunder back to TAIS.

4. Limited Warranty. THE SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, TAIS AND ITS SUPPLIERS DISCLAIM ALL WARRANTIES WITH REGARD TO THE SOFTWARE, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE WARRANTY OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS, THE WARRANTY OF YEAR 2000 COMPLIANCE, AND THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE IS WITH YOU. NEITHER TAIS NOR ITS SUPPLIERS WARRANT THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE. HOWEVER, TAIS WARRANTS THAT ANY MEDIA ON WHICH THE SOFTWARE IS FURNISHED IS FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF NINETY (90) DAYS FROM THE DATE OF DELIVERY TO YOU.

5. Limitation Of Liability. TAIS' ENTIRE LIABILITY AND YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LICENSE AGREEMENT SHALL BE AT TAIS' OPTION REPLACEMENT OF THE MEDIA OR REFUND OF THE PRICE PAID. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL TAIS OR ITS SUPPLIERS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, SPECIAL, INCIDENTAL OR INDIRECT DAMAGES FOR PERSONAL INJURY, LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION/DATA, OR ANY OTHER PECUNIARY LOSS OF ANY KIND ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE, EVEN IF TAIS OR ITS SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL TAIS OR ITS SUPPLIERS BE LIABLE FOR ANY CLAIM BY A THIRD PARTY.

6. State/Jurisdiction Laws. SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY MAY LAST, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO SUCH LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE/JURISDICTION TO STATE/JURISDICTION.

7. Export Laws. This License Agreement involves products and/or technical data that may be controlled under the United States Export Administration Regulations and may be subject to the approval of the United States Department of Commerce prior to export. Any export, directly or indirectly, in contravention of the United States Export Administration Regulations, or any other applicable law, regulation or order, is prohibited.

8. Governing Law. This License Agreement will be governed by the laws of the State of California, United States of America, excluding its conflict of law provisions.

9. United States Government Restricted Rights. The Software is provided with Restricted Rights. Use, duplication, or disclosure by the United States Government, its agencies and/or instrumentalities is subject to restrictions as set forth in subparagraph (c)(1)(ii) of The Rights in Technical Data and Computer Software Clause at DFARS 252.227-7013 (October 1988) or subparagraphs (c)(1) and (2) of the Commercial Computer Software - Restricted Rights at 48 CFR 52.227-19, as applicable.

10. Severability. If any provision of this License Agreement shall be held to be invalid, illegal or unenforceable, the validity, legality and enforceability of the remaining provisions hereof shall not in any way be affected or impaired.

11. No Waiver. No waiver of any breach of any provision of this License Agreement shall constitute a waiver of any prior, concurrent or subsequent breach of the same or any other provisions hereof, and no waiver shall be effective unless made in writing and signed by an authorized representative of the waiving party.

YOU ACKNOWLEDGE THAT YOU HAVE READ THIS LICENSE AGREEMENT AND THAT YOU UNDERSTAND ITS PROVISIONS. YOU AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. YOU FURTHER AGREE THAT THIS LICENSE AGREEMENT CONTAINS THE COMPLETE AND EXCLUSIVE AGREEMENT BETWEEN YOU AND TAIS AND SUPERSEDES ANY PROPOSAL OR PRIOR AGREEMENT, ORAL OR WRITTEN, OR ANY OTHER COMMUNICATION RELATING TO THE SUBJECT MATTER OF THIS LICENSE AGREEMENT.

**Toshiba America Information Systems, Inc.**  
**Telecommunication Systems Division**  
9740 Irvine Boulevard  
Irvine, California 92618-1697  
United States of America

TSD 081601

5932

# **Toshiba America Information Systems, Inc.**

## **Telecommunication Systems Division**

### **Limited Warranty**

Toshiba America Information Systems, Inc., ("TAIS") warrants that:

- The CTX Attendant Console equipment, such as the PC (except for fuses, lamps, and other consumables) will, upon delivery by TAIS or an authorized TAIS dealer to a retail customer in new condition, be free from defects in material and workmanship for twelve (12) months after delivery.
- And that the Toshiba telephone equipment (except for fuses, lamps, and other consumables) will, upon delivery by TAIS or an authorized TAIS dealer to a retail customer in new condition, be free from defects in material and workmanship for twenty-four (24) months after delivery.

This warranty is void (a) if the equipment is used under other than normal use and maintenance conditions, (b) if the equipment is modified or altered, unless the modification or alteration is expressly authorized by TAIS, (c) if the equipment is subject to abuse, neglect, lightning, electrical fault, or accident, (d) if the equipment is repaired by someone other than TAIS or an authorized TAIS dealer, (e) if the equipment's serial number is defaced or missing, or (f) if the equipment is installed or used in combination or in assembly with products not supplied by TAIS and which are not compatible or are of inferior quality, design, or performance.

The sole obligation of TAIS or Toshiba Corporation under this warranty, or under any other legal obligation with respect to the equipment, is the repair or replacement by TAIS or its authorized dealer of such defective or missing parts as are causing the malfunction with new or refurbished parts (at their option). If TAIS or one of its authorized dealers does not replace or repair such parts, the retail customer's sole remedy will be a refund of the price charged by TAIS to its dealers for such parts as are proven to be defective, and which are returned to TAIS through one of its authorized dealers within the warranty period and no later than thirty (30) days after such malfunction, whichever first occurs.

Under no circumstances will the retail customer or any user or dealer or other person be entitled to any direct, special, indirect, consequential, or exemplary damages, for breach of contract, tort, or otherwise. Under no circumstances will any such person be entitled to any sum greater than the purchase price paid for the item of equipment that is malfunctioning.

To obtain service under this warranty, the retail customer must bring the malfunction of the machine to the attention of one of TAIS' authorized dealers within the twenty-four (24) month period and no later than thirty (30) days after such malfunction, whichever first occurs. Failure to bring the malfunction to the attention of an authorized TAIS dealer within the prescribed time results in the customer being not entitled to warranty service.

THERE ARE NO OTHER WARRANTIES FROM EITHER TOSHIBA AMERICA INFORMATION SYSTEMS, INC., OR TOSHIBA CORPORATION WHICH EXTEND BEYOND THE FACE OF THIS WARRANTY. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND FITNESS FOR USE, ARE EXCLUDED.

No TAIS dealer and no person other than an officer of TAIS may extend or modify this warranty. No such modification or extension is effective unless it is in writing and signed by the vice president and general manager, Telecommunication Systems Division.

# Contents

---

## Introduction

Conventions .....	vi
Related Documents/Media .....	vii

## Chapter 1 – The Grand Tour

Attendant Keys .....	3
Numeric Keypad .....	3
Special Function Keys .....	4
Function and Volume Keys .....	5
Views and Controls .....	6
Call Monitor View .....	6
Menu Bar .....	7
Toolbars .....	7
Info Bar .....	8
Status Bar .....	8

## Chapter 2 – Call Processing

Login .....	9
Answering Incoming Calls .....	10
Prompts .....	11
Releasing a Call .....	11
Making a Call .....	12
Call Completion .....	13
BLF/DSS Dialing .....	14
Directory Dialing .....	16
Show Department/Show All .....	17

## **Contents**

### *Chapter 3 – User Directory*

Hold.....	17
Call Transfer .....	18
Blind Transfer.....	18
Conference Calls .....	19
Joining and Splitting a Call.....	19
Switching Between Source and Destination Parties .....	20
Paging .....	21
Call Pickup.....	22
Call Door Phones .....	23
Door Unlock.....	24
Call Park.....	25
Status.....	26
Messages Tab.....	28
Message Waiting Light.....	29
Contacts Tab .....	31

### **Chapter 3 – User Directory**

User Directory Dialog.....	34
Directory Lists .....	36

### **Chapter 4 – Control Panel**

Control Panel View .....	38
Prompts Tab.....	41
Feature Keys Tab.....	42

### **Chapter 5 – Call Statistics**

Call Statistics View .....	44
----------------------------	----

## **Chapter 6 – Administration**

Administration View .....	48
Admin Tab .....	48
Primary/Alternate Tab .....	50
User & Dept. Tab.....	51
BLF Network Control Tab.....	52
Answer Priority Tab .....	53
BLF Sorting Tab.....	54
Backup Log Files .....	55
<b>Appendix – Call List .....</b>	<b>57</b>
<b>Index .....</b>	<b>59</b>

## **Contents**

*Chapter 6 – Administration*



# Introduction

---

This guide is designed to provide instructions for the Strata CTX Attendant Console connected to Toshiba's Strata CTX system. It provides step-by-step instructions on how to use the features and buttons of the Attendant screens.

This user guide is divided as follows:

- **Chapter 1 – The Grand Tour** includes information on the CTX Attendant Console keyboard, the Main Menu, Toolbar, and other features for the Console.
- **Chapter 2 – Call Processing** explains how to perform the most commonly-used features, including answering, calling, and transferring calls.
- **Chapter 3 – User Directory** explains how the Attendant can view and make changes to the user directory that lists employees and groups.
- **Chapter 4 – Control Panel** provides descriptions and instructions for making console settings. These settings include the console Night Transfer Mode, Setting System Date and Time, Call Forwarding, Call Overflow and other settings affecting how calls are handled during or after your shift.
- **Chapter 5 – Call Statistics** explains how to display, print and export the Console's call statistics.
- **Chapter 6 – Administration** describes various administrative features which affect the console's capabilities.
- **Appendix – Call List** describes call status terms and reasons that appear in the Call List view.

## Conventions

Conventions	Description
<b>Note</b>	Elaborates specific items or references other information. Within some tables, general notes apply to the entire table and numbered notes apply to specific items.
<b>Important!</b>	<i>Calls attention to important instructions or information.</i>
<b>CAUTION!</b>	<b>Advises you that hardware, software applications, or data could be damaged if the instructions are not followed closely.</b>
Extension Number	<p>Press to answer a call to the Extension Number. Each station can have multiple extension buttons. Incoming calls ring the extension button(s) from the top down. For example, station 10's extensions ring 10-1 first, then 10-2, 10-3, and 10-4. A station is considered busy when all extensions are being used.</p> <p><b>Note</b> The naming convention for DKT assignments within Toshiba is Directory Numbers. For clarity and ease of understanding, the terms Extension Number and Phantom Extension Number will be used in this document in lieu of PDN and PhDN.</p>
<b>Arial Bold</b>	Represents keys on the keyboard.
+	<p>shows a multiple PC keyboard or telephone button entry. Entries without spaces between them show a simultaneous entry.</p> <p>Example: <b>Delete+Enter</b>.</p> <p>Entries with spaces between them show a sequential entry.</p> <p>Example: <b># + 5</b>.</p>
Tilde (~)	Means "through." Example: 350~640 Hz frequency range.
➤	Denotes the step in a one-step procedure.
➤	Denotes a procedure.

Conventions	Description
Start > Settings > Printers	Denotes a progression of buttons and/or menu options on the screen you should select.
See Figure 10	Grey words within the printed text denote cross-references. In the electronic version of this document (Library CD-ROM or FYI Internet download), cross-references appear in blue hypertext.

## Related Documents/Media

**Note** Some documents listed here may appear in different versions on the CD-ROM or in print. To find the most current version, check the version/date in the Publication Information on the back of the document's title page.

Refer to the following for more information:

- Strata CTX Attendant Console Quick Reference Guide
- Strata CTX Attendant Console Installation Manual
- Strata CTX WinAdmin Application Software and Documentation Library on CD-ROM

For *authorized users*, Internet site FYI (<http://fyi.tsd.toshiba.com>) contains all current Strata CTX documentation and enables you to view, print and download current publications.

## **Introduction**

*Related Documents/Media*

# The Grand Tour

---

# 1

This chapter describes the Strata CTX Attendant Console, menu options and keyboard. It provides general instructions for PC keyboard operations and for navigating through the screens and dialog boxes.

The PC for the console is designed to handle all call activity within a single screen. All calls appear in a single list. The CTX Attendant Console enables an Attendant to manage console settings, maintain a user directory, and make administrative changes. Calls are marked with icons to show the current status.

To make call handling as simple as possible, only the applicable features (tools) are offered on-screen.

**Note** Your console may not have all of these features enabled. See your System Administrator to find out which features are available on your console.

## The Grand Tour

The Strata CTX Attendant Console is provided on a PC with Microsoft® Windows® 2000 operating systems. It connects to the Strata CTX processor via the LAN as a Customer Supported Telephony Application (CSTA). It also connects to a digital station port for the speech path. The console consists of the following items:

- Pre-installed CTX Attendant Console software application
- Keyboard
- Special Attendant Keyboard stickers (CTX-KL-ATCON-VA). See [“Attendant Keys” on pages 3~5](#) for sticker placement.
- Mouse

The following customer-supplied items are needed:

- Color VGA monitor (600x800 pixels) or better
- Attendant Console Interface Unit (BATI), which connects to the BDKU or PDKU station interface on the Strata CTX. Also, a handset and cradle (BATHC). A headset can be optionally ordered


...or

a DKT3001 can be used as the station interface. If a headset is used, it connects to the BHEU installed in the DKT3001. See [“Important!” on page 9](#).

The Strata CTX670 system supports up to four, and the CTX100 supports up to two Attendant Consoles. Multiple consoles automatically share the incoming call load on a call-by-call rotation basis. Features such as Overflow, Position Busy, and Interposition Call Transfer add to the efficiency of single or multiple console applications.

# Attendant Keys


## Numeric Keypad

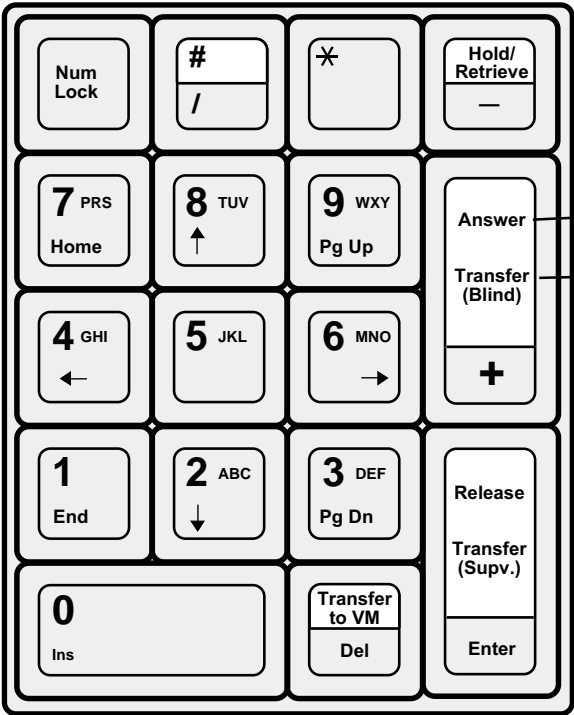

Some keys have multiple functions.  
For example, press this key to Answer a call.  
Then, you can press this key to Blind Transfer the call.

PC KEY	ATTENDANT KEY	DESCRIPTION
Minus (–)	<b>Hold/Retrieve</b>	Hold or Retrieve a call
Plus (+)	<b>Answer</b> <b>Transfer (Blind)</b>	Answer or Blind Transfer.
Enter	<b>Release</b> <b>Transfer (Supv.)</b>	Release or Supervised Transfer.
Del	<b>Transfer to VM</b>	Voice Mail Transfer.


## Special Function Keys

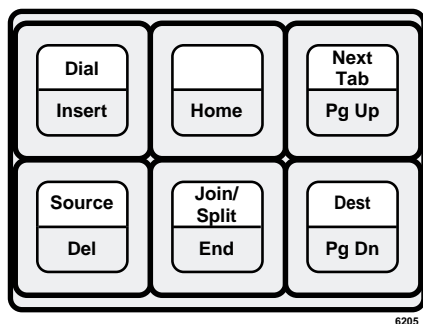

PC KEY	ATTENDANT KEY	DESCRIPTION
INSERT	<b>Dial</b>	Brings up the dial menu (you can then use the arrow keys to select a dialing option).
Pg Up	<b>Next Tab</b>	Navigation tool that starts with the Call List View, then moves from tab to tab. (See “Tabs” in the Call Monitor View shown on <a href="#">page 6</a> .)
Del	<b>Source</b>	Connects to the source party.
End	<b>Join/Split</b>	Joins calls in a conference call; splits three-way conference.
Pg Dn	<b>Dest</b>	Connects to the destination party.




Function and Volume Keys

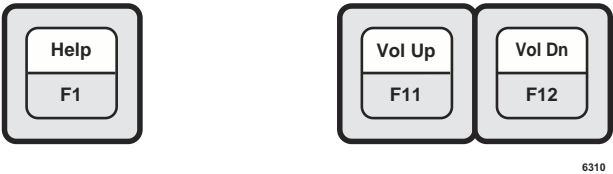

PC KEY	ATTENDANT KEY	DESCRIPTION
F1	<b>Help</b>	Displays the help topic.
F11	<b>Vol Up</b>	Increases the handset or the ringer volume.
F12	<b>Vol Dn</b>	Decreases the handset or the ringer volume.

**Note** If you place all the key stickers on your keyboard, you will have some leftover stickers. These are for frequently used features that you can program onto keys **F2~F10**, such as Page, Call Pickup, Park, Park Page, and Door Unlock. See [“Feature Keys Tab” on page 42](#).

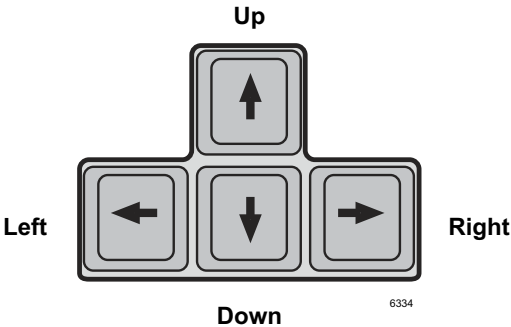

ARROW KEYS	DESCRIPTION
<b>Up</b>	Navigates upward to different entries.
<b>Down</b>	Navigates downward to different entries.
<b>Left</b>	Navigates to the left.
<b>Right</b>	Navigates to the right.

## Views and Controls

The View Pane contains icons for Call Monitor, User Directory, Control Panel, and Administration views. Clicking an icon activates the corresponding work area view.

### Call Monitor View

This view is used for controlling calls. It lists all current calls and has a toolbar for easy call control. The bottom portion of the screen has tabs for changing the lower window to items important to the Attendant. (See the window shown below).

The screenshot shows the Strata CTX Attendant Console interface. The title bar reads "Strata CTX Attendant Console - Directory Number: 200". The menu bar includes "Console", "Call", "Directory", "Statistics", "Messages", "View", and "Help". The toolbar contains various icons for call control. The main area is divided into a "Call Monitor" section at the top and a "Directory" section at the bottom. The "Call Monitor" section displays a table of active calls with columns: Status, Reason, Time, Name, Number, Duration, and Line. The "Directory" section displays a table of users with columns: Name, Directory No., Status, VM Box, and Phone. The bottom of the screen features a "Status Bar" with various indicators and a "Call Monitor Tabs" section with tabs for "Prompt/Notes", "BLF/DSS0", "BLF/DSS1", "Directory", "Contacts", and "Messages".

**Menu Bar**

**Toolbar Icons**

**Info Bar**

**Call Monitor**

**Call Status icons**

**Call Attributes (See Appendix for definitions)**

**Call List**

**View Pane Icons**

**Call Monitor Tabs**

**Directory**

**Notes about the user highlighted in the Directory.**

**Status Bar**

Status	Reason	Time	Name	Number	Duration	Line
Active		00:02:01	205 A Phone 3	205	00:02:04	
Incoming	Dial 0	00:01:58	Fitzpatrick Keith	202	00:01:58	

Name	Directory No.	Status	VM Box	Phone
205 205 A Phone 3	205	BUSY		
205 A Phone 3 205	205	BUSY		
205 Goodnews Miss	205	BUSY	205	205
206 Johnson Jeffrey	206	IDLE	206	
206 Kong Jessica	206	IDLE		
206 Phone1 206	206	IDLE		
5301 Sky Ted	5301	IDLE	5301	
5800 Smith Martin	5800	IDLE	5800	
6001 Simmons Jean	6001	IDLE		

Position Active Day Mode OverFlowOff CF-Off Trace ON BLF Network 02:26 PM 6594


## Menu Bar

The menu bar for the CTX Attendant consists of the Console, Call, Directory, Statistics, Messages, View, and Help menus.

## Toolbars

The toolbar contains icons for call handling (shown below). It is another option for performing many of the keyboard or menu functions. The icon name appears when you place your cursor over a icon.


### Call Handling Toolbar Icons

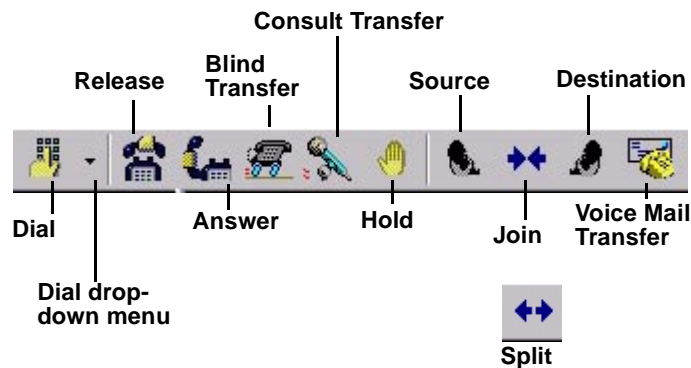

6311

### Optional Toolbar Icons

The call monitor toolbar may also contain the following optional icons:

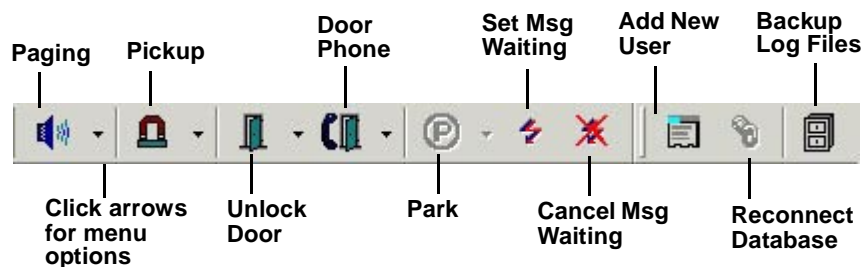

6312

## Call Statistics Toolbar Icons



6331

## Info Bar

The Info Bar is on the top of Call List View. The Info Bar displays the number of incoming calls at the moment, LCD message and the last Park Orbit number.

## Status Bar

This provides a quick overview of the console's status settings on the bottom of your screen. For more information, see [“Status” on page 26](#).

# Call Processing

## 2

Many of the calling features in this chapter take advantage of the “hot” keyboard. When you start typing the name or extension number of an individual, the Strata CTX Attendant Console begins the dialing process or searches for a match in the directory for the person being dialed.

### Important!

- *If a DKT telephone is connected to the CTX Attendant Console PC, use the keyboard for all PC operations when the console is running. (When the console is in Position Busy, it is still running.)*
- *When the Attendant Console software is not running, the DKT3001 telephone can be used for regular calling. Calls intended for an Attendant when the software is not running will follow the Alternate Destination programmed in Strata CTX. Only calls directed to the DKT’s primary extension number will ring the phone.*
- *Also, if the handset interferes with the headset, you can unplug the handset while using the headset.*

## Login



1. To login, double click on the Strata CTX Attendant Console icon  
...or click on the icon in the Microsoft Windows Start menu bar  
...or select Start > Programs > Strata CTX Attendant > Strata CTX Attendant Console.
2. Select User ID.
3. Type the password (default is empty), press Enter or click OK.

## Call Processing


### Answering Incoming Calls



- To answer the highest ringing call, press **Answer** (+) key on the keyboard

...or click the **Answer** icon

...or double click on the entry.

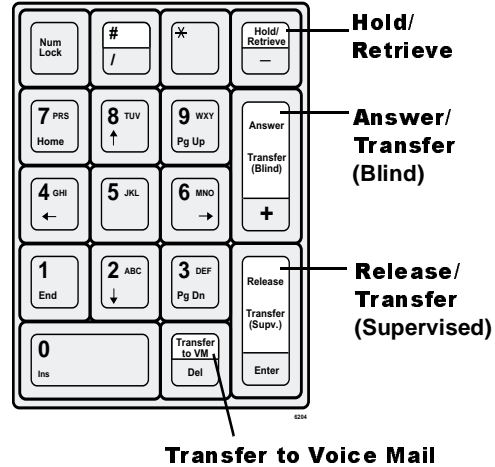

Strata CTX Attendant Console - Directory Number: 202

Console Call Directory Messages View Help

Call Monitor: Calls Waiting: 2 Last State: TALK TO 206

Status	Reason	Time	Name	Number	Duration
Active	Dial 0	00:00:51	Johnson Jeffrey	206	00:01:00
Incoming	Dial 0	00:00:57	Phone2 200	200	00:00:57
Incoming	Dial 0	00:00:55	205 A Phone 3	205	00:00:55

Press the Answer key.  
The call with the "sounding" bell will be answered. This is based on priority settings.



Once a call is answered, that call is marked with the **Source Call** icon and is colored green while connected to the Attendant.

➤ **To answer a specific call**

- Highlight the call using the Up/Down arrows on your keyboard, then press **Answer**  
...or double click on the call to answer.


➤ **To make notes about the current call**

- Press Next Tab or click the Prompt/Notes tab, then click in the text area with your cursor and type notes (shown below). The notes disappear when you disconnect.

---

Caller needs to talk to Sales Manager.

**The Prompt/Notes tab is where you enter notes about the current call.**

 

## Prompts

- To use answering Prompts, click the Prompts/Notes tab and answer according to the on-screen prompt. (Example: "Toshiba America, Telecom Division.")

If prompts have been entered, they appear on-screen (in the Prompts/Notes tab section, see above) when a call comes in that fits the prompt criteria. Prompts may remind you how to answer for a particular line, line group, or entire company.

There are two requirements to create prompts: One, prompts must be entered in the Control Panel, Prompts tab. Two, in Administration, on the Admin tab, "Activate Line Prompt" must be checked.

## Releasing a Call

- While on an active call, press **Release** (Enter) on the keyboard



...or click the **Release** icon  
...or select Call > Release.

## Making a Call

### ➤ To dial using the keyboard

- Type the number on the numeric keypad, press **Release/Transfer** (Enter) on the keyboard.

**Note** If the console is idle when you dial, the view changes to the Directory tab view.

### ➤ To dial a number from an on-screen dial pad




1. Press **Dial** (Insert) key  
...or click the **Dial Pad** icon down arrow, then select the Dial Pad  
...or select Call > Dial > Dial Pad.
2. Enter the number, click **Dial**.

### ➤ To redial the last number



- Press **Alt+C**, press **L**, then select the dialed number  
...or click the **Dial** icon down arrow, select one of the recently dialed numbers at the bottom of the menu.

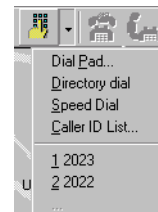

### ➤ To dial a number from call history



1. Press **Alt+C**, press **L**  
...or select Call > Dial > Caller ID List. A list of recently received calls displays. The list shows calling numbers, the time of the calls, and whether each call was answered or abandoned.
2. Select a number, press **Dial**.



➤ To dial a speed dial number



1. Press **Alt+C**, press **L**, then select Speed Dial  
...or click the **Dial** icon drop-down arrow, select Speed Dial.  
...or select Call > Dial > Speed Dial.  
The console's Speed Dial numbers display.
2. Select a Speed Dial number, click OK.

## Call Completion

Call Completion codes are options for when you encounter busy or Do Not Disturb (DND), or other conditions that prevent you from completing a call. These codes enable you to override these conditions or to use another method to reach someone.

- To complete a call using Call Completion Codes, enter the number on your keypad that corresponds with the desired code described below.

### Call Completion Codes

NUMERIC KEYPAD BUTTON	DESCRIPTION
<b>1</b>	Always set the ring mode to Tone First or override a busy/DND call.
<b>2</b>	Set the ring mode to Voice First always or override a busy/DND call.
<b>3</b>	Intrude into a busy/DND call (ExecOverride).
<b>4</b>	Set callback on a busy or ringing call.
<b>5</b>	Perform manual Off-hook Call Announce (OCA) or set the ring mode to Voice first always or override a busy/DND call.
<b>7</b>	Set Message Waiting light on other phone.

...or

- Click Call > Call Completion, then select Tone/Voice, Busy Override, Executive Override, Call Back, or Set Message Waiting/Cancel Message Waiting.


## BLF/DSS Dialing

The Busy Lamp Field/Direct Station Selection (BLF/DSS) tab provides a list of users, their extensions, and telephone status (icons). You can make calls from this tab.

1. Press **Next Tab** on the keyboard to select the BLF/DSS tab.
2. Use the up or down arrows on the keyboard to select an individual.
3. Press the Enter key on the keyboard (not the numeric keypad) or double click on the individual that you want to call.

...or

1. Click the BLF/DSS tab.
2. Press the Enter key on the keyboard or double click on an entry  
...or select an entry, then double click on the individual that you want to call.

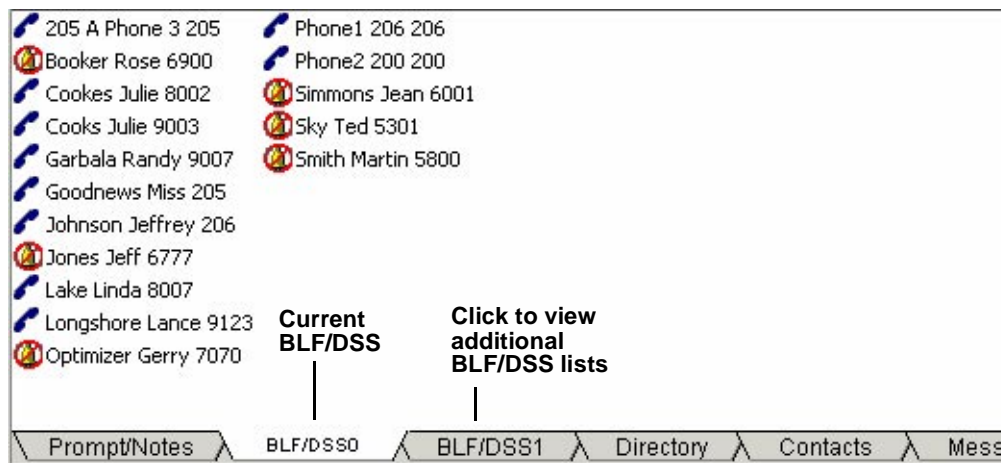

Status icons indicate these calling conditions.

	Station Idle		Station Idle with Advisory Message
	Station Busy		Station Busy with Advisory Message
	Station DND or "Not attached to the local system"		Station DND with Advisory Message

**Note** If your CTX telephone system is networked to another CTX system (using R1.2 or later software), you can see BLF/DSS information for all users. When using versions prior to CTX 1.2, vacant stations and pilot numbers on a remote networked system appear in DND status. With R1.2 and higher, these stations will appear idle on the BLF.

➤ **To make a consultation transfer from the BLF/DSS tab**

1. With a connected call, click on the destination party. Your console shows “Announce” and you can announce the call.
2. Press **Transfer (Enter)** on the keyboard to send the call to the destination party.

➤ **To perform a blind transfer from the BLF/DSS tab**

- With a connected call, double-click on the destination party. The call immediately leaves the console and calls the destination.

**Note** You can customize the order of the names from the User Directory. See [Chapter 3 – User Directory](#) for more details.

**Number of BLF tabs**

The number of BLF tabs that appear on your screen varies according to the display setting on your PC (see below):

Display Setting	Maximum Number of BLF Tabs
600 x 800	3
1024 x 768	5
1152 x 864	7

## Directory Dialing

The Directory tab lists the names, extensions, status, Voice Mail (VM) box, and additional phone numbers of everyone in the directory. The information in the directory is entered from the User Directory (see [Chapter 3 – User Directory](#)). It is stored in the CTX Attendant Console Database.

The status icons are the same as the BLF/DSS. There's also a field for Notes (far right, not shown) on each entry.

1. Press **Next Tab** on the keyboard to select the Directory tab or after answering a call, begin entering the name or number.
2. Use the up or down arrows on the keyboard to select an individual.
3. Press **Release/Transfer** (Enter) key on the keyboard.

...or

1. Click the Directory tab (shown below).
2. Double click on an entry or select an entry and press **Release/Transfer** (Enter) on the keyboard.

**Note** If you dial a number that your console is not permitted to use, "Invalid" displays in the grey area above "Name."

Show Department				
Name	Directory No.	Status	VM Box	Phone
200 Phone2 200	200	IDLE		
202 Fitzpatrick Keith	202	IDLE	202	205
205 205 A Phone 3	205	IDLE		
205 A Phone 3 205	205	IDLE		
205 Goodnews Miss	205	IDLE	205	205
206 Johnson Jeffrey	206	IDLE	206	
206 Kong Jessica	206	IDLE		
206 Phone1 206	206	IDLE		
5301 Sky Ted	5301	IDLE	5301	

Prompt/Notes BLF/DSS0 BLF/DSS1 Directory Contacts Messages

## Show Department/Show All

1. Click Show Department to view the directory by department or Show All to view individual listings. Departments are created in the Administration view.
2. Click the “+” in front of the Dept. Name to display department members  
...or while in Dept. View, type the Dept. Name. Department members display.

## Hold

### ➤ To hold a call

- To put the current call on hold, press **Hold/Retrieve**



...or click on the **Hold** icon. You can also select an active call in the call list, then select Call > Hold.

### ➤ To retrieve a held call

- Highlight call to be retrieved, press **Hold/Retrieve**



...or highlight the call to be retrieved, then double-click on the call in the call list

...or highlight the call to be retrieved, select Call > Hold/Retrieve/Return.

...or click the **Hold** icon again.

## Call Transfer

### Blind Transfer

Blind transfer is when you perform an immediate transfer without announcing the call to the destination party.



- While on an active call, dial the destination party on the numeric keypad. Press **Transfer (Blind)** (+) on the keyboard

...or click on the **Blind Transfer** icon

...or select Call > Transfer > Blind transfer.

Enter destination party from the number keypad. The Directory Dial window appears (shown right), and the matching entry is shown in the top window.

If an exact match is not found, scroll and select a name/number, click OK.



6220

- **To make a supervised transfer call**



1. While on an active call, dial the destination party on the numeric keypad, press **Transfer (Supv.)** (Enter) on the keyboard.
2. Announce the call (optional). The first party is put on ConsultHold, while you announce to the second party (shown below).

	ConsultHold	Directed Call	00:01:47	Kong Jessica	206	00:01:59
	Announcing		00:01:47	Goodnews Miss	205	00:01:47

3. Press **Transfer (Supv.)** (Enter).
- To set up the Supervised Transfer call, select Call > Setup Conference. Enter the destination party, then click OK, announce the call. Press Enter to transfer.

When selecting the destination party from the BLF/DSS, Directory or Contact tabs, the CTX Attendant Console automatically transfers the call if the default transfer flag in Admin View is enabled. CTX Attendant Console performs consultation transfer if the default transfer flag is disabled.

➤ **To transfer a call to voice mail**

1. While connected to a call, enter the extension number to transfer to.
2. Press **Transfer to VM** (Del) on the keyboard. Call goes to Voice Mail

...or while connected to a call, select Call > Transfer > Voice Mail Transfer, enter the destination extension, and press Enter.



...or

1. While connected to a call, click the **Transfer to VM** icon.
2. Enter the extension number to transfer to.
3. Press Enter or click OK.

## Conference Calls

### Joining and Splitting a Call



- With calls on source and destination, press **Join/Split**.  
...or select Call > Join/Split. The CTX Attendant creates a three-way conference.

➤ **To add another destination party to the conference with the Attendant**

1. While in a conference (“conferenced” shows on-screen), dial the extension to add, press **Release** (Enter).
2. After the dialed party answers, press **Join/Split** (End). The CTX Attendant joins the active call and the consultation call.  
...or select Call > Join > Join/Split.

➤ **To split a three-way conference call**



- Press **Join/Split**  
...or select Call > Join/Split.

## Call Processing

### Conference Calls

#### ➤ To release the last party from a conferencing call

- Select Call > Release Last Party.

## Switching Between Source and Destination Parties

**Note** You can switch between Source and Destination parties (swap) when two calls are conferenced together with the Attendant.



- To switch to the source party, press **Source** (Delete)  
...or select Call > Source.



- To switch to the destination party, press Destination (Page Down)  
...or click on the **Destination** icon.



## Paging

You can make paging announcements to a primary or alternate page zone. See your System Administrator for a definition of the page zone areas.

**Note** You can assign one of the function keys (**F2~F10** on your keyboard) as the **Page** key. See [“Feature Keys Tab” on page 42](#).

### ➤ To page the primary page zone



1. Click the **Paging** icon. The current call is placed on hold if the administration option “Automatic Hold” is enabled.
2. Make an announcement over the paging system.  
...or click the **Page** icon down arrow, select Primary Page  
...or select Console > Page > Primary Page.

### ➤ To page an alternate page zone



1. Click the **Paging** icon down arrow, select Alternate Page  
...or select Console > Page > Alternate Page
2. Click the down arrow and select a paging zone.
3. Click **Paging**.

### ➤ To make an emergency page

1. Click the **Paging** icon down arrow, select Emergency Page  
...or select Console > Page > Emergency Page.
2. Click the down arrow and select a paging zone.
3. Click **Emergency**. Console will override any page going to that zone.

## Call Pickup

Call pick up provides a variety of ways for calls ringing at other stations to be picked up at this location. Some of these options require additional digits to be entered to select the CO line, a group, or station.

**Note** You can assign one of the function keys (**F2~F10** on your keyboard) as the **Call Pickup** key. See [“Feature Keys Tab” on page 42](#).

### ➤ To pick up a call at the primary location



1. Click the **Pickup** icon

...or select Console > Call Pickup > Primary.

The Pickup icon defaults to the Primary Pickup option.

2. Click the down arrow to select the Pickup Held/Ringing station.
3. Click **Pickup**.

### ➤ To pick up a call at an alternate location

1. Click the **Pick Up** icon down-arrow, select Alternate Pickup.
2. From the Call Pickup window, select a category and click the down arrow to select a line or station to pick up.
3. Click **Pick Up**.

## Call Door Phones

**Note** You can assign one of the function keys (**F2~F10** on your keyboard) as the **Door Phone** icon. See [“Feature Keys Tab” on page 42](#).

### ➤ To call the primary door phone



1. Click the **Door Phone** icon

...or select Console > Door Phone > Primary Phone.

If only one Door Phone was programmed in the system, the console calls the Primary Door Phone. If more than one Door Phone was programmed, continue to the next step.

2. In the Door Phone window, click the drop down arrow to select the door phone, click **Door Phone**.

### ➤ To call the alternate door phone

1. Click the **Door Phone** icon drop-down arrow, select Alternate Phone

...or select Console > Door Phone > Alternate Phone.

2. In the Door Phone window, click the drop down arrow to select the door phone, click **Door Phone**.

## Door Unlock

Calls from Door Phones appear as a call in the call window. These calls can be answered in the same way any other call is handled. Some CTX installations provide the ability to unlock the door with the Door Unlock icon.

**Note** You can assign one of the function keys (**F2~F10** on your keyboard) as the **Door Unlock** key. See [“Feature Keys Tab” on page 42](#).

### ➤ To unlock the primary door



1. Click the **Door Unlock** icon. If only one door was programmed in the system, the primary door unlocks. If more than one door was programmed, continue to the next step.
2. Select a door from the Door Unlock list down arrow, click **Unlock**.

### ➤ To unlock an alternate door



1. Click the **Door Unlock** icon drop-down arrow. Performs same function as Console > Door Unlock.
2. Select Alternate Unlock.
3. Click the down arrow, select a door to unlock.
4. Click **Unlock**.

## Call Park

**Note** You can assign one of the function keys (**F2~F10** on your keyboard) as the **Park** or **Park & Page** key. See [“Feature Keys Tab” on page 42](#).

### ➤ To park a call

1. Select a call.
2. Click the **Park** icon. The call is parked by the system at a location set in the Administration view under the Primary setting.



### ➤ To select primary park, alternate park, or retrieve

1. Select a call.
2. Click the **Park** icon down arrow, then select a park option  
...or select Call > Park, then select a Park option.



If you select Primary or Alternate Park, you can choose one of the following:


- **Station** enables you to type or select a park station.
- **Auto** enables the system to select a park orbit to park the call.
- **Park** button parks the call and enables you to make a page announcement.
- **Park Page** button enables you to park the call per your selection (left side of this window) and to then make a page announcement.
- **Retrieve** enables you to retrieve the last (or highlighted) parked call.

### ➤ To retrieve a parked call

1. Right click in the call list view area, then select Park Retrieve.
2. In the Call Retrieve dialog box, type or select an orbit or extension number, then click **Retrieve**.
  - ...or click the Park down-arrow, then select Retrieve
  - ...or select Call > Park Retrieve.

## Status

The functions and descriptions for the Attendant status are as follows:

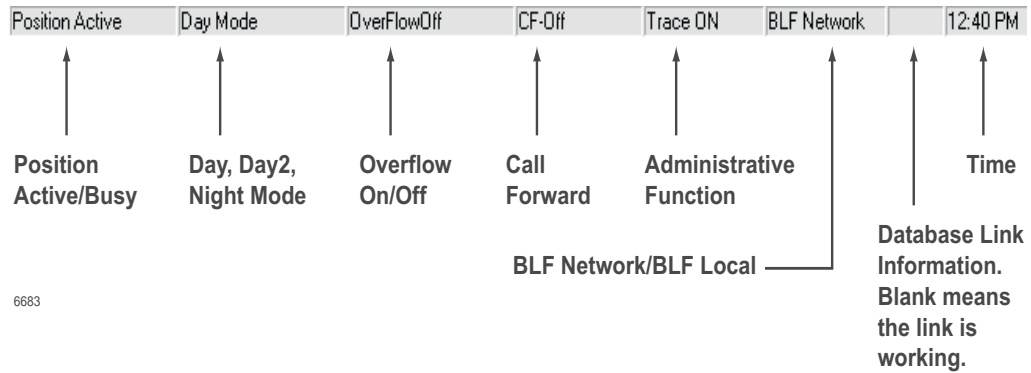

FUNCTIONS	DESCRIPTION
Position Active/Busy	Enables you to set Position Busy or Position Active.
Day/Night Mode	Enables you to set Day, Day 2, or Night Mode.
Overflow On/Off	Enables you to set Overflow on or off.
CF-Setting	Enables the Attendant to determine what kind of Call Forwarding is available: No Call Forwarding, All Calls or External calls. All the items are dynamically inserted into the Call Forward menu.
Trace ON	Ignore. Used for the troubleshooting purposes.
BLF Network/Local	If your Strata CTX telephone system has the networking feature and the ability to retrieve network information, then "BLF Network" displays; otherwise, it displays "BLF Local."
Database Link	Display "Database Link Broken" in red when Database is disconnected. No text is displayed when Database is connected.
Time	Enables the Attendant to set the date and time at the PC by pressing Change PC button.

➤ **To change console, overflow, night mode or call forward (CF) destination status**

- Right click on the current status on the Status bar, then select the new choice.

Position Busy  
✓ Position Active

...or

1. Click Console > Console Status, Overflow, or Day/Night Mode or Forwarding. A menu displays (shown right).
2. Click the new choice. The new status displays.

OverFlowOn  
✓ OverFlowOff

✓ Day  
Day2  
Night

**Notes**

- The CF destinations are defined by the Administrator (see “[Call Forward \(CF\) Settings](#)” on page 39).
- Call Forward applies only to the Attendant Console extension number. It does not forward the calls in queue.

CF-Any >> 2021,Takada Larry  
CF-Trunks >> 211,Sugiura Jessica  
CF-Trunks >> 217,Ha Brannon  
CF-Any >> 321,Young Alex

➤ **To fix a broken database link**



- Click the **Reconnect Database** icon

...or select Directory > Reconnect Database.


If the screen shown right appears, the link is still broken. Contact your Telephone System Administrator.

➤ **To change date and time**

1. Right click on the current time showing. The Date and Time dialog box displays.
2. Type or select new settings, click **Apply**.
3. Click **OK**. Date/Time window closes.

## Messages Tab

This tab enables you to view existing messages or add a new message for a person listed in the Directory. You can save, delete or print messages. Messages are stored in a shared file directory available to any CTX console in your telephone system.

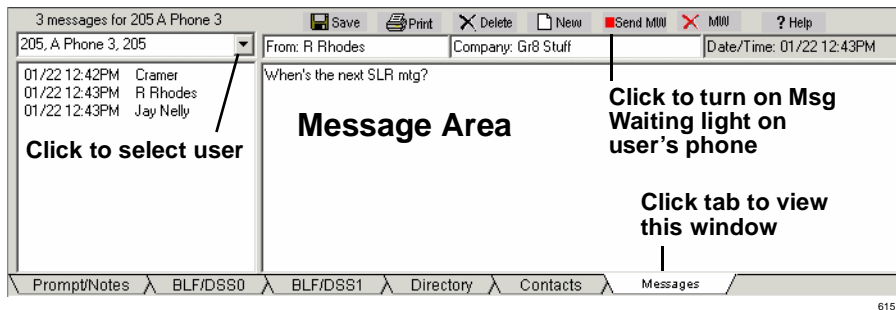

### ► To take a message for a user

1. Click the Messages tab.
2. With the message displayed, pull down the list of names and scroll to find message recipient. Enter characters to speed scroll down to the letters entered.
3. Begin the message by entering the name of the person the message is from and optionally a company name. The date and time will automatically be entered.
4. Tab down to the message area and enter a text message.
5. Click the **Save** icon to store the message in that person's folder
6. Click the **Send MW** button to turn on the Message Waiting light on the user's telephone.





## Message Waiting Light

If you call a busy telephone, you can set a Message Waiting light so that they will return your call.

### ➤ To set a message waiting light on a telephone



- From the Messages tab, you can select a user and click the Send MW button

...or you can



1. Click the **Message Waiting** icon.
2. Type or select a directory number.
3. Click OK. The Msg light turns on at that station. When the user presses the **Msg** button, the console is called

### ➤ To cancel a message waiting light on a telephone



1. Click the **Cancel Message Waiting** icon.
  2. Type or select a directory number.
- Click OK. The Msg light turns off at that station.

...or



1. Click the Messages tab.
2. Click the down arrow, and select a user name in the left window.
3. Click the **MW Cancel** button.

## Call Processing

### Messages Tab

#### ➤ To retrieve messages for a user

When the user calls the Attendant console, the Message Tab automatically pops up and that user's messages will be listed in the left hand box.

1. If the user calls from a non-matching phone or calls in from the outside, select the user's name from the drop-down directory listing.
2. Highlight any message and the details appear in the right-hand window.

#### ➤ To retrieve messages left for the console

1. Press **Next Tab** on the keyboard to access Call Monitor View.
2. Use the up or down arrows on the keyboard to select the message.
3. Press **Answer/Transfer** (Enter) key on the keyboard.

...or double click on the message waiting call in the call list (see example below).  
Your console will call the station that left the Message.

Call Monitor: Calls Waiting: 0			Last State:			
Status	Reason	Time	Name	Number	Duration	L
Message		00:00:19		205	00:00:19	

#### ➤ To delete a message for a user

1. Click the Messages tab.
2. Click on name of a user, select the message, then click the **Delete** icon.

#### ➤ To print one or all messages

1. Click the Messages tab.
2. Select the message(s), click the **Print** icon.

## Contacts Tab

This tab provides the complete contact listing for one individual on the screen. The only item that can be changed from any Attendant position is the Notes field.

- To view contacts, click the Contacts Tab, use the arrow buttons to move from contact to contact.

**Note** The fields Status, Name, Job title, Department and e-mail are usually edited by the Administrator.

**Arrows to page through users**

**Click in this box to type notes.**

**Click tab to view Contacts**

- **To dial using contact information**
  - To dial an alternate number from the user directory, right click on an entry in the BLF/DSS or right click in the Directory tab. The CTX Attendant Console displays the Contacts tab for that entry.
  - To dial a phone number in the Contacts tab, double click on the phone number or select the phone number and press **Release/Transfer** (Enter) on the keyboard.
- **To add a note**
  1. Click in the Notes box, type a note.
  2. Click the Modify Notes button. The first few words of the note appear in the Directory tab view as calls are dialed or transferred, or if the associated user's name is highlighted in the directory. This is useful for noting when users are on vacation or out of the office. (See [“Call Monitor View” on page 6.](#))


## **Call Processing**

*Contacts Tab*

# User Directory

3

You can create/add/delete users to the Directory. The User Directory List view also enables any Attendant to view the employees and groups in the user directory (shown below).

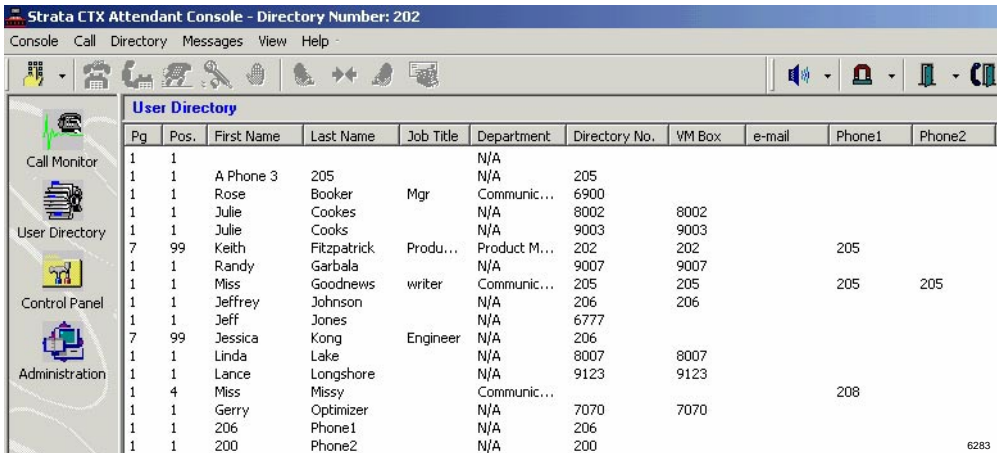

The screenshot shows the 'Strata CTX Attendant Console - Directory Number: 202'. The 'User Directory' tab is selected, displaying a list of users with columns: Pg, Pos, First Name, Last Name, Job Title, Department, Directory No., VM Box, e-mail, Phone1, and Phone2. The list includes entries for 'A Phone 3', 'Rose Booker', 'Julie Cookes', 'Julie Cooks', 'Keith Fitzpatrick', 'Randy Garbala', 'Miss Goodnews', 'Jeffrey Johnson', 'Jeff Jones', 'Jessica Kong', 'Linda Lake', 'Lance Longshore', 'Miss Missy', 'Gerry Optimizer', and '206 Phone1' and '200 Phone2'.

Pg	Pos.	First Name	Last Name	Job Title	Department	Directory No.	VM Box	e-mail	Phone1	Phone2
1	1	A Phone 3	205		N/A	205				
1	1	Rose	Booker	Mgr	Communic...	6900				
1	1	Julie	Cookes		N/A	8002	8002			
1	1	Julie	Cooks		N/A	9003	9003			
7	99	Keith	Fitzpatrick	Produ...	Product M...	202	202		205	
1	1	Randy	Garbala		N/A	9007	9007			
1	1	Miss	Goodnews	writer	Communic...	205	205		205	205
1	1	Jeffrey	Johnson		N/A	206	206			
1	1	Jeff	Jones		N/A	6777				
7	99	Jessica	Kong	Engineer	N/A	206				
1	1	Linda	Lake		N/A	8007	8007			
1	1	Lance	Longshore		N/A	9123	9123			
1	4	Miss	Missy		Communic...				208	
1	1	Gerry	Optimizer		N/A	7070	7070			
1	1	206	Phone1		N/A	206				
1	1	200	Phone2		N/A	200				

The following fields appear in the User Directory list:

FIELD	DESCRIPTION
Pg.	Page number where this entry appears on BLF/DSS.
Pos.	Position of this entry on the BLF/DSS tab page.
First Name	The user's first name.
Last Name	The user's last name.

## User Directory

### *User Directory Dialog*

FIELD	DESCRIPTION
Job Title	The user's job title.
Department	The user's department.
Directory Number	The user's directory number.
VM Box	The user's voice mail box.
e-mail	The user's e-mail address.
Phone 1	The user's additional phone number.
Phone 2	The user's additional phone number.
Phone 3	The user's additional phone number.
Cellular	The user's cellular phone number.

The following operations are allowed in the directory list:

- Clicking the column heading of the list view sorts the entries in ascending order. Clicking the column heading again sorts the entries in descending order.
- Right click on an entry to display the user directory dialog.

## User Directory Dialog

The user directory dialog enables you to add/change a single directory entry. Only the Notes can be changed, unless you are an Administrator. Additions or changes to the Directory are stored in the CTX Attendant Console Database.

### ➤ To add a new user to the directory



- Click on the **New User** icon  
...or select Directory > Add New User.

➤ **To change a directory entry**



1. Click on the **User Directory** icon.
2. Right click on a name in the directory window
3. After making new or changing entries, select Directory > Update Directory to update the Directory tab screen and the BLF tab screen.

6196

The fields are the same as described in the User Directory view. The following are buttons found on the User Directory Form dialog box.

BUTTON NAME	DESCRIPTIONS
New	Blanks out all the fields. The Update button changes to Add button after clicking the New button.
Add	Insert a user to the user directory list. The Add button changes to Update button after clicking the Add button.
Update	Update a user's information.
Delete	Delete a user from the user directory list.
First, Previous, Next, Last	Show the first user, previous user, next user, or last user.
Close	Exit the user directory dialog.

**Note** The Operator Attendant can only perform the following operations: Update the notes, View the first, previous, next and last user and close the dialog.

## Directory Lists

You can import and export files created in Excel into the Console's directory. We suggest that you create a few users in the directory as described previously, then export the directory for updating.

You may find it more convenient to create a directory while the console is offline (not processing calls).

➤ **To create a directory list offline**

1. Create a file in Excel or edit an exported directory list.

**Important!** *If you are creating a brand new file in Excel, you must have the exact number of columns that the Attendant directory contains.*

2. Type in the directory entries.
3. When you have completed your list, type the word "End" (no quotes) in the last row, first column of your Excel file.

➤ **To import a directory list (This function is only enabled in the offline console)**

1. Click Directory > Import Directory.
2. Click Browse, locate and highlight the directory Excel file to import.
3. Click OK.

➤ **To export a directory list**

1. Click Directory > Export Directory.
2. Select a location to export the directory.
3. Click OK.



# Control Panel


---

# 4

This chapter explains how to set the console control features, such as setting a Call Forward destination, night time call handling, etc. Console control features are generally those that you set at the beginning and end of your shift.

## Control Panel View

The Control Panel view contains the Status, Prompts and Feature Keys tabs.

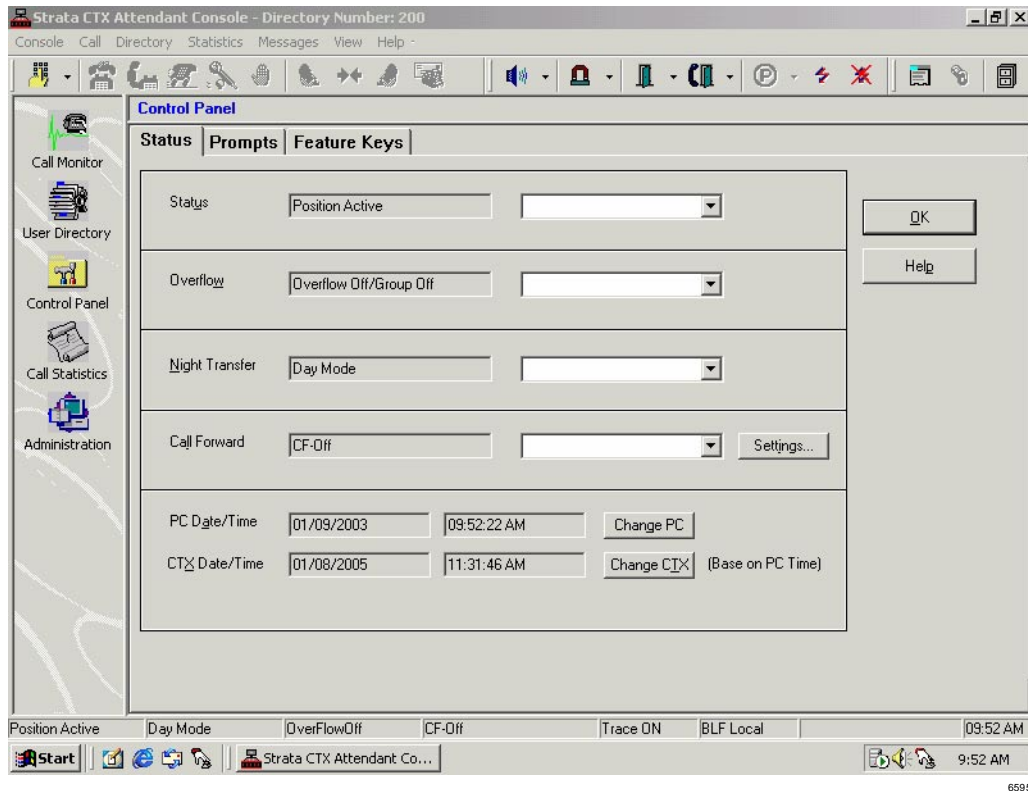

### Status Tab

The status tab enables you to view and edit details of the status bar items.

## Position Busy/Active

When there are multiple Attendant consoles to handle calls, you can place a console in Position Busy status. Held and transfer recalls continue to ring the console that processed them. When the last console in the Attendant group is placed in Position Busy mode, the entire group is considered unattended. All calls will be directed to the Alternate Destination location when the entire group is unattended.

The console is placed in a Position Busy Pending state if you are connected to a call, making an outgoing call, holding, or if you are in ring transfer mode. When you have completed call handling, the console enters Position Busy mode.

### ► To change console status to position busy/active



1. Click the **Control Panel** icon.
2. Select the Status tab, then use the drop-down list to select Position Busy or Position Active.

## Overflow On/Off



1. Click the **Control Panel** icon.
2. From the Status tab, use the pull down the list to select the Overflow On/Overflow Off.

## Night Transfer

You can set the console to transfer after-hours calls to a different station. After Hours call routing can be set for three different modes: Day, Day2, and Night mode based upon settings in the Strata CTX system.



1. Click the **Control Panel** icon.
2. From the Status tab, use the pull down the list to select Day, Day2, or Night mode.

## Call Forward (CF) Settings

The Call Forward (CF) menu selections are created or set from the Control Panel.

## Control Panel

### Control Panel View

#### ➤ To create call forward menu items



1. Click the **Control Panel** icon.
2. From the Status tab, use the Call Forward pull-down the list to select the type of Call Forward.  
...or to create a new Call Forward destination, click the **Settings** button. Click the CF drop-down box to select a CF call type (Trunks or All). In the next box, select a CF destination, click **Apply**.

- To delete a CF menu item, follow the above instructions and click **Delete** (instead of Apply in the final step).

To select CF for the console (after the menus have been created), refer to [“To change console, overflow, night mode or call forward \(CF\) destination status” on page 27](#).

Call Forward applies only to the Attendant Console extension number. It does not forward the calls in queue.

## Date/Time

The date and time can be set using the PC's internal clock. This clock can be changed.

#### ➤ To set the PC date and time



1. Click the **Control Panel** icon.
2. From the Status tab, click the **Change PC** button to bring up the Windows clock setting routine. Make any changes necessary to correct the time.
3. Click Apply, click OK.


#### ➤ To set the CTX time to match the PC date and time



1. Click the **Control Panel** icon.
2. Click the **Change CTX** button. The time should change in this window and on the associated LCD telephones.

## Prompts Tab

This tab enables you to type in prompts for incoming calls through outside lines, as well as for specific lines and dialed numbers (DNIS).

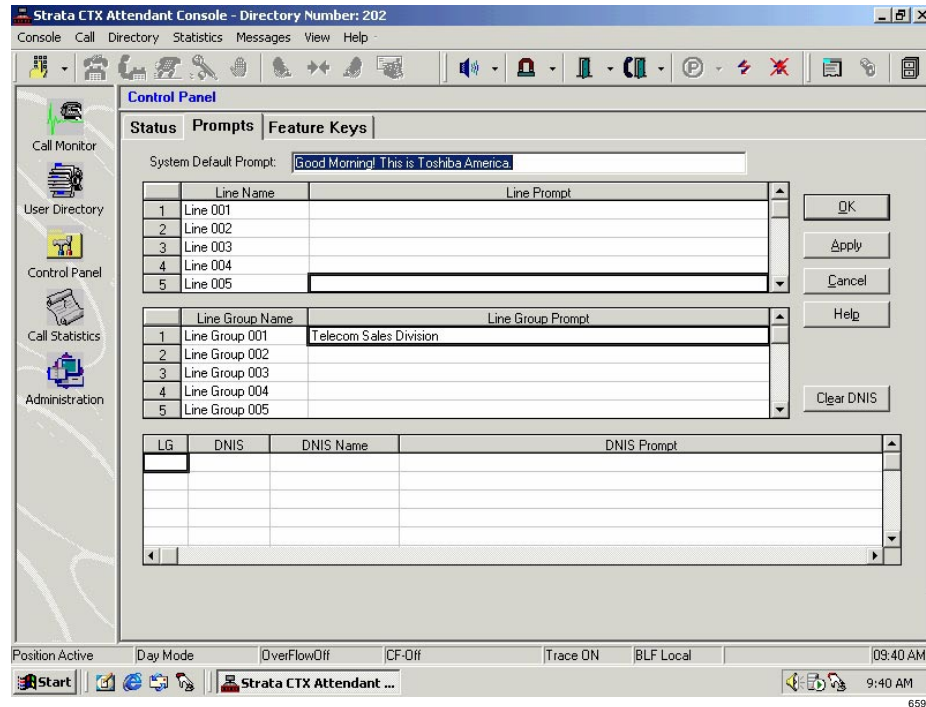


### ► To store a prompt



1. Click the **Control Panel** icon.
  2. Click the Prompts tab.
  3. Click in the desired cell to enter a prompt, such as “Telecom Sales Division” shown in the screen above.
  4. Click OK or Apply when you are done.
- To clear all items in one row in the DNIS section, click the Clear DNIS button.

## Feature Keys Tab

This tab is where you assign dialing sequences to the **F2~F10** keys. F-keys can be used as Speed Dial locations or to store dialing prefixes or area codes.

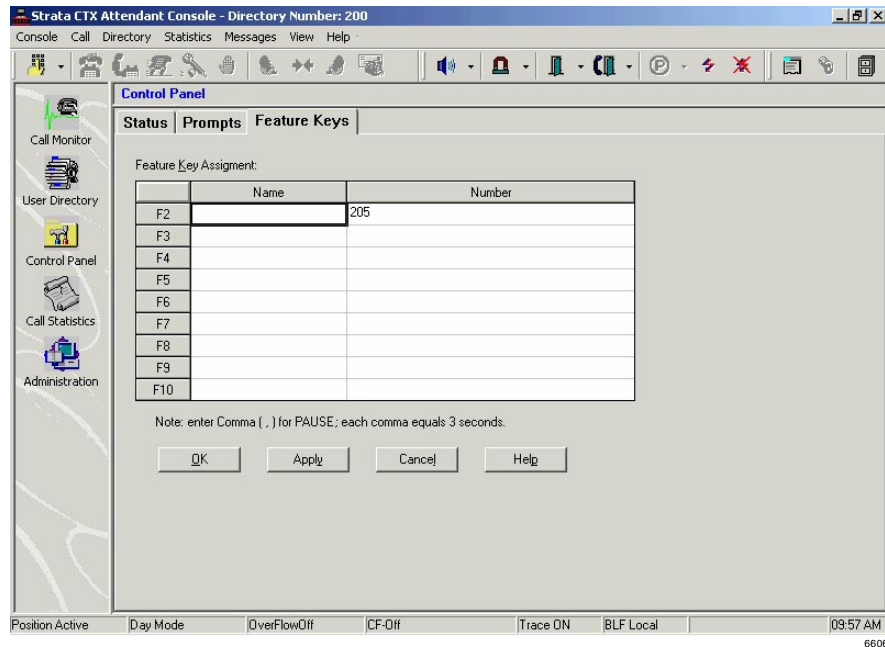

### ► To store numbers onto keys F2~F10



1. Click the **Control Panel** icon.
  2. Click the Feature Keys tab.
  3. Click in the Name box of the **F**-key and enter a name.
  4. Click in the **F**-key box and enter the dialing string.
  5. Click on any tab or icon when you are done.
  6. If there is a pre-printed sticker for that function, stick it on the key  
...or write the key function on one of the blank stickers and stick it on the key.
- To use the **F2~F10** keys, press the **F**-key and the stored numbers are dialed. You can use these keys in addition to the dial pad.

This chapter describes the types of information and reports available on the Attendant position.


Statistics on incoming calls are collected and stored daily for each console. Each console collects information pertaining to that console only.

To develop a larger set of statistics when multiple consoles are used, the files from each location can be imported into any standard spread sheet for preparing a composite report. The information collected includes:

- number of internal incoming calls received per hour
- number of external incoming calls received per hour
- total talk time (in seconds) per hour
- maximum number of calls in queue (CIQ) each 15-minute interval

# Call Statistics View

Call Statistics View consists of an edit box with a spin control for selecting the date for past 30 days and a list of statistics collected for each hour of the day.

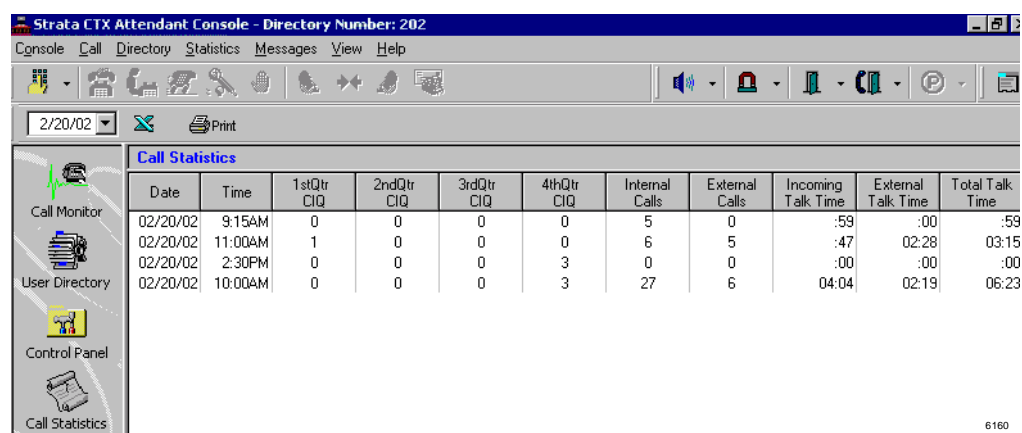

The following statistic attributes are displayed in columns of the statistics list:

FIELD	DESCRIPTION
Date	The date of the statistics was collected.
Time	The time (every hour) of the statistics or the console's start up time.
1st Qtr CIQ	The maximum number of calls in queue for the first 15 minute interval.
2nd Qtr CIQ	The maximum number of calls in queue for the second 15 minute interval.
3rd Qtr CIQ	The maximum number of calls in queue for the third 15 minute interval.
4th Qtr CIQ	The maximum number of calls in queue for the fourth 15 minute interval.
Internal Calls	The number of internal incoming calls received per hour.



FIELD	DESCRIPTION
External Calls	The number of external incoming calls received per hour.
Incoming Talk Time	The talk time in seconds for incoming calls received per hour.
External Talk Time	The talk time in seconds for external calls received per hour.
Total Talk Time	The total talk time in seconds for all calls received per hour.

**Notes**

- A user can select a date from current date to 30/31 days prior to the current date to view the call statistics.
- A user can print statistics for the current page or for a range of dates.
- A user can export statistics for the current page or for a range of dates to an Excel spreadsheet and save it as an Excel file.

➤ **To display call statistics for any specific day**

1. From the View pane click on the Call Statistics icon. Call Statistics view displays.
2. Enter a date to view the statistics. The default view is today's date.

➤ **To print call statistics**

1. From the View pane click on the Call Statistics icon. Call Statistics view displays.
2. Click the Print icon. A dialog box appears offering choices for printing.
3. Select either print Current page or enter a range of dates to print the reports.

➤ **To export data to Excel**

1. From the View pane click on the Call Statistics icon. Call Statistics view displays.
2. Click the Excel icon. A dialog box appears.
3. Enter a date range.
4. Browse to select the location for the Excel file.



This chapter discusses the features of the Strata CTX Attendant Console that apply to the Administrator.


Maintenance and administration of the CTX Attendant Console is through the Control Panel, User Directory, and Administration work area views.

## Administration View

The Administration view provides a view of administrative settings. It contains the Admin, Primary & Alternate, User & Dept, BLF Network Control, Answer Priority and BLF Sorting tabs.

### Admin Tab

- To access the Administration tab, click the Administration icon.

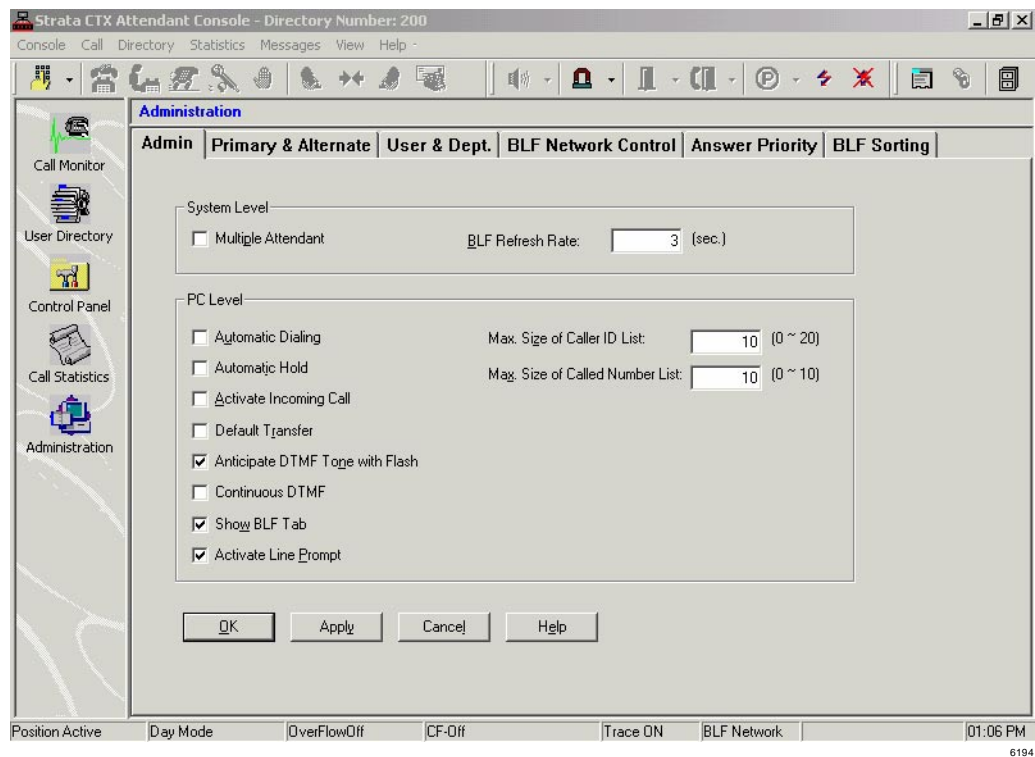

The Admin tab contains the following sections:

FIELD	DESCRIPTION
Multiple Attendant	Allow multiple Attendant operations.
BLF Refresh Rate	Enables the Attendant to define the refresh rate for polling the CTX for BLF/DSS status. The minimum rate is 1 second. The default is 3.
Automatic Dialing	Enable/Disable automatic dialing. Console will transfer call as soon as name or DN is matched.
Automatic Hold	Enable/Disable automatic hold.
Activate Incoming Call	Enable/Disable activate incoming call. PC will automatically switch to operating as the CTX Attendant Console when a new call comes in.
Default Transfer	Enable/Disable default transfer (Blind transfer).
Anticipate DTMF Tone with Flash	Enable/Disable the DTMF Tone dialog to anticipate use after Flash. Disable if Flash is used for Call Waiting on telco lines.
Continuous DTMF	Enable/Disable the continuous DTMF tone.
Show BLF Tab	Displays/Hides the BLF tab from the Call Monitor.
Activate Line Prompt	This enables the Prompt to be visible (during the appropriate conditions). See Control Panel, <a href="#">"Prompts Tab" on page 41</a> and <a href="#">"Prompts" on page 11</a> .
Max. Caller ID	Maximum of Caller ID. Allow the Caller ID telephone numbers to display in the Caller ID list. The valid value is from 0 to 20.
Max. Called Number	Maximum of Called Number. Allow the numbers of Called Numbers display on the Called List. The valid value is from 0 to 10.

#### Notes

- The Administrator can change all the above settings.
- The Operator/Attendant can change only PC level settings.

## Primary/Alternate Tab

Enables the Administrator to set one and only one Primary and/or multiple Alternates for Door Unlock, Door Phone, Paging Zone's and Pickup Location. Also defines the names.

- To access the Primary/Alternate tab, click Administration icon, select Admin tab.

Strata CTX Attendant Console - Directory Number: 200

Console Call Directory Statistics Messages View Help

**Administration**

Admin Primary & Alternate User & Dept. BLF Network Control Answer Priority BLF Sorting

Door Unlock:

Primary	Alternate	Name
<input checked="" type="radio"/>	<input checked="" type="checkbox"/>	Door Unlock 01
<input type="radio"/>	<input checked="" type="checkbox"/>	Door Unlock 02
<input type="radio"/>	<input checked="" type="checkbox"/>	Door Unlock 03
<input type="radio"/>	<input checked="" type="checkbox"/>	Door Unlock 04
<input type="radio"/>	<input type="checkbox"/>	Door Unlock 05
<input type="radio"/>	<input type="checkbox"/>	Door Unlock 06
<input type="radio"/>	<input type="checkbox"/>	Door Unlock 07
<input type="radio"/>	<input type="checkbox"/>	Door Unlock 08
<input type="radio"/>	<input type="checkbox"/>	Door Unlock 09

Door Phone:

Primary	Alternate	Name
<input checked="" type="radio"/>	<input checked="" type="checkbox"/>	Door Phone 01
<input type="radio"/>	<input checked="" type="checkbox"/>	Door Phone 02
<input type="radio"/>	<input checked="" type="checkbox"/>	Door Phone 03
<input type="radio"/>	<input checked="" type="checkbox"/>	Door Phone 04
<input type="radio"/>	<input type="checkbox"/>	Door Phone 05
<input type="radio"/>	<input type="checkbox"/>	Door Phone 06
<input type="radio"/>	<input type="checkbox"/>	Door Phone 07
<input type="radio"/>	<input type="checkbox"/>	Door Phone 08
<input type="radio"/>	<input type="checkbox"/>	Door Phone 09

Primary Pickup Location:

Station Held/Ringing

Primary Park:

OK Apply Cancel Help

Paging Zone:

Primary	Alternate	Name
<input checked="" type="radio"/>	<input checked="" type="checkbox"/>	AllZonesPaging
<input type="radio"/>	<input checked="" type="checkbox"/>	Paging Zone 01
<input type="radio"/>	<input checked="" type="checkbox"/>	Paging Zone 02
<input type="radio"/>	<input type="checkbox"/>	Paging Zone 03
<input type="radio"/>	<input type="checkbox"/>	Paging Zone 04
<input type="radio"/>	<input type="checkbox"/>	Paging Zone 05
<input type="radio"/>	<input type="checkbox"/>	Paging Zone 06
<input type="radio"/>	<input type="checkbox"/>	Paging Zone 07
<input type="radio"/>	<input type="checkbox"/>	Paging Zone 08

Position Active Day Mode OverflowOff CF-Off Trace ON BLF Local 10:01 AM

6290

The number of doors and paging zones must match the number assigned in Strata CTX programming.


- To assign the Primary Pickup Location, click the down arrow in this box and select a location, then click Apply or OK.
- To make the Park feature available to the Attendant Console, click the down arrow in the Primary Park box, select a Park function, then click Apply or OK.

## User & Dept. Tab

Enables the Administrator to setup Login User Setup Operation and Department Name Setup Operation. The maximum length of Login Name and password is 50 characters each.

There are two types of access: Administrator and Operator rights. Administrator rights can have full access in the Attendant console. Operator rights only can access enabled functions.

- To access the User & Dept. tab, click the Administration icon, select User & Dept. tab.

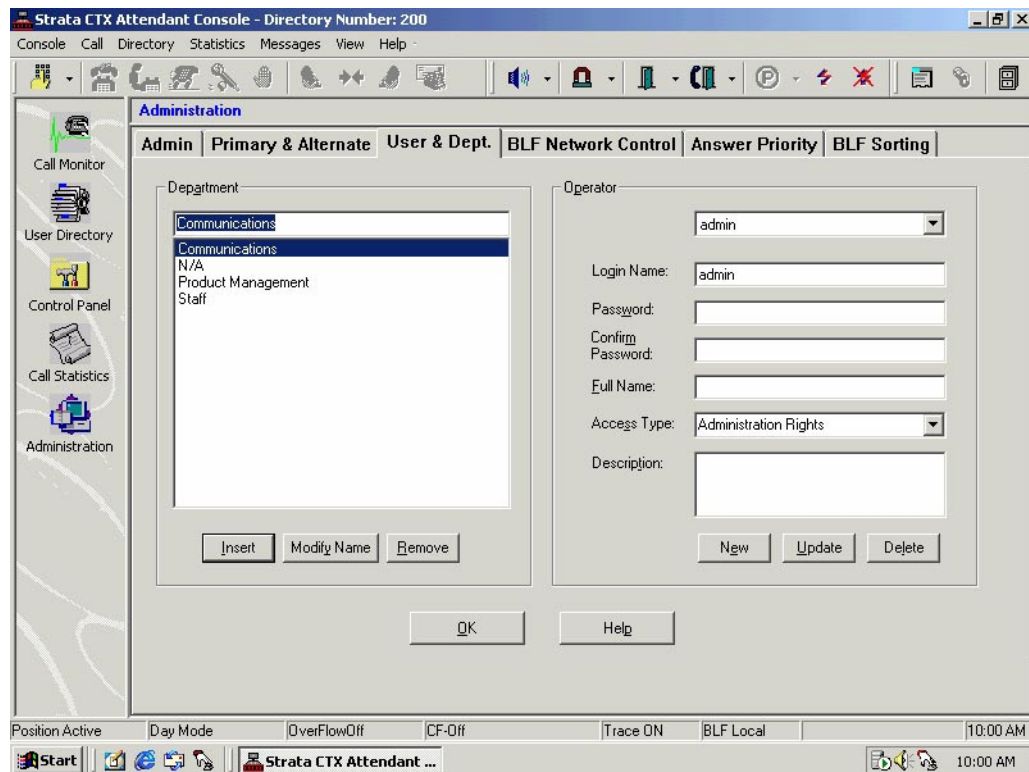

6291

## BLF Network Control Tab

This enables you to change the IP Address, port number or CTX host name.

1. To access the BLF Network Control tab, click the Administration icon, select BLF Network Control tab.
2. Make sure that the Port No. is 6000. If it is not, change this to 6000.
3. Enter refresh rate (3~30 seconds).

---

**CAUTION!** *Do not change the IP address, Port No., or name unless this data has been changed in the Strata CTX programming. This data must match the programmed information or the BLF will not work.*

---

Strata CTX Attendant Console - Directory Number: 200

Console Call Directory Statistics Messages View Help

Administration

Admin Primary & Alternate User & Dept. BLF Network Control Answer Priority BLF Sorting

IP Address	Port No.	Name	Refresh Rate	Link
192.168.254.253	6000	Chicago	3	Up
192.168.254.253	6000	Chicago	3	Up

OK Add Update Delete Help

Position Active Day Mode Overflow Off CF Off Trace ON BLF Network 03:03 PM


6599



## Answer Priority Tab

This enables you to change the priority of certain types of calls. Similarly, you can set answer priorities for specific line groups.

- To access the Answer Priority tab, click the Administration icon, select Answer Priority tab.

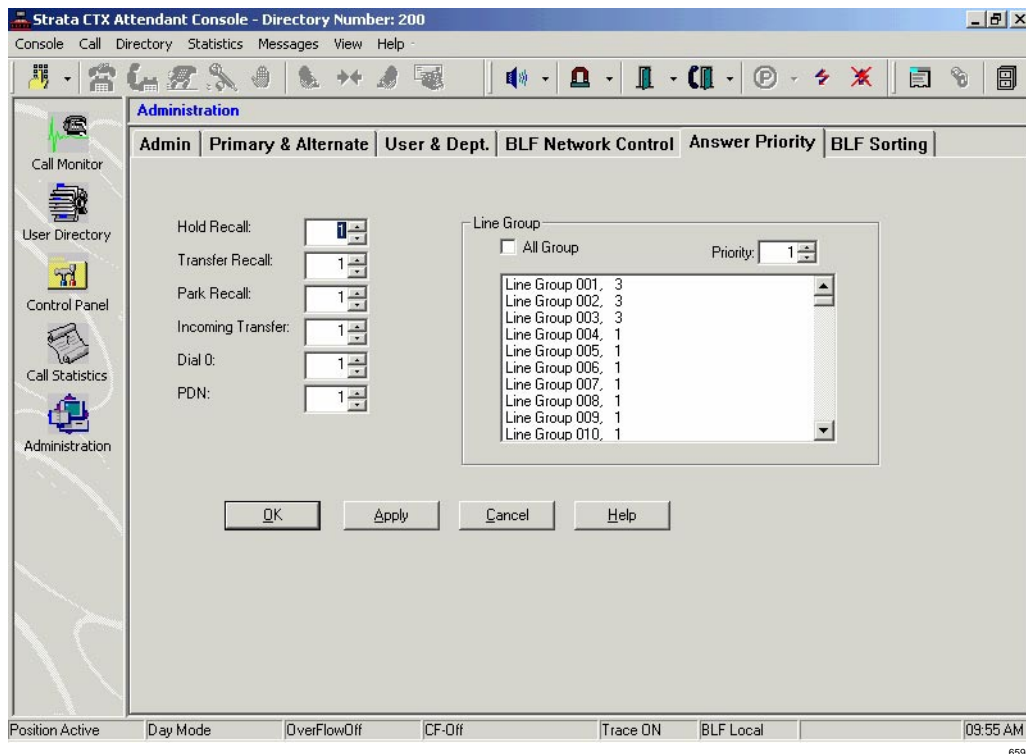

- To assign priority levels to the call types shown in the left column (see example shown above), click the up/down arrows to change the priority. "1" is the highest priority (default). Click OK or Apply when finished.
- To assign priorities to specific line groups, highlight a group or groups, then click the up/down arrow to assign a priority to that group. Click OK or Apply when finished.


## Administration

Administration View

### BLF Sorting Tab

This enables you to change the sorting order of the user directory or user list in the BLF/DSS tabs. The sort is performed within priority numbers. For example, if there are three different priority levels in the directory, priority level 1 will be sorted by Last Name (or whatever you select), then priority level 2 users will be sorted by Last Name, and then priority level 3 users will also be sorted by Last Name.

- To access the BLF Sorting tab, click the Administration icon, select BLF Sorting tab. Click the down arrows to make a selection, then click OK or Apply.

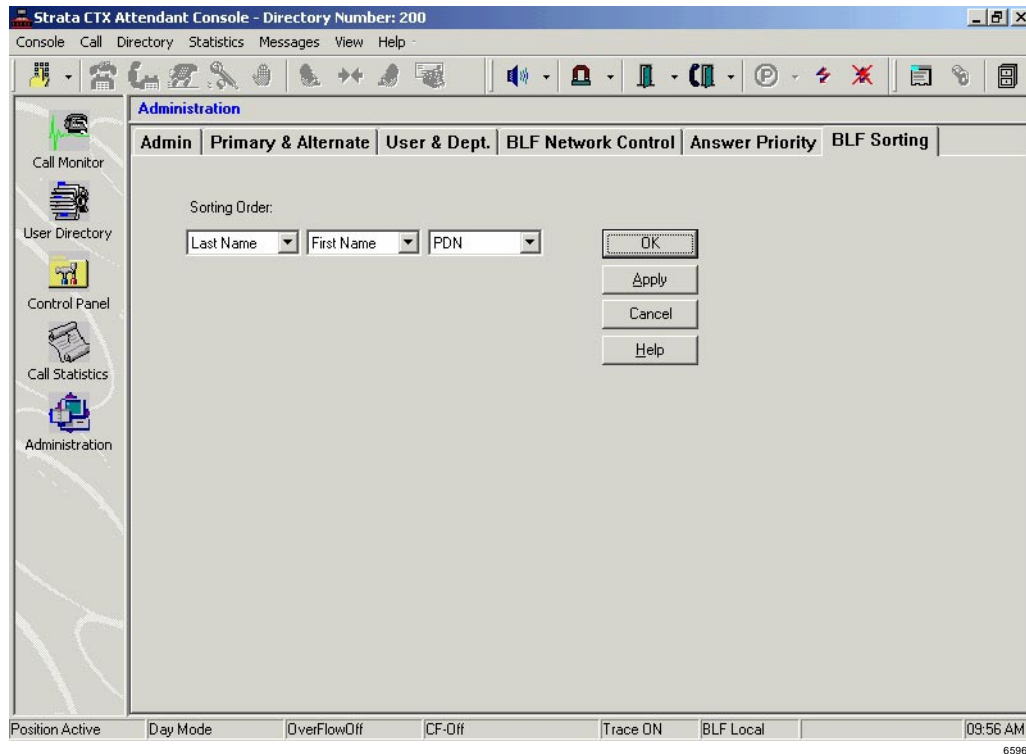

## Backup Log Files

This is an administrative function that is *not* performed from the Administration window. Log files are useful for troubleshooting. The CTX Attendant log files are unrelated to the Database Utility. Actually backing up the files is a simple procedure which can be performed by an Attendant.



1. To Backup the Log file, click the **Backup Log Files** icon.

Wait a few seconds while the application and TSP log files are backed up into the existing log directory..\..\nhsatt\log\backup and ....\nhstsp\log\backup subdirectory (the path may be different if a Custom installation was performed.) A window notifies you that the files were backed up.

2. Click OK.

## **Administration**

*Backup Log Files*

# Appendix – Call List

---

The call list view provides a list of calls and related information. The following attributes of a call are displayed in the columns of the call list view:

Call Attribute	Description
<b>Status:</b>	
Incoming	The call is offered to the station and indicates a new call (Ring or NoRing).
Dialing	The call is in the process of dialing.
RingBack	The call is receiving ringback tone
Announcing	The call is in announcing mode.
Busy	The call is receiving busy tone.
Active	The call is connected.
Conferenced	The call is conferenced.
On Hold	The call is on hold, on hold pending conference, or on hold pending transfer.
ConsultHold	Consultation Hold call.
Disconnected	The call is disconnected.
ParkPage	The call is Park Page Connected.
PageBusy	The call is Park Page Busy.
InConference	When a Station adds the Console to conference.
InDoorPhone	The call is in doorphone.
Message	Station sent a Message Waiting to Console.
LineBusy	The trunk line is busy.

## Appendix – Call List

### Backup Log Files

Call Attribute	Description
<b>Reason</b>	
Directed Call	The call is a direct dial call to the PDN.
Dial 0	The call is dialed directly to the operator.
Call Forward	(Busy, No Answer, Busy/No Answer, Unconditional) - The call has been forwarded to the Attendant.
Pickup	The call was picked up.
Unpark	The call was parked and retrieved by the Attendant.
Redirect	The call was redirected to the Attendant.
Hold Recall	The call was recalled from hold.
Call Completion	The call was the result of a call completion request.
Transfer Call	The call was transferred to the Attendant.
Park Recall	The call is recalled from park.
Transfer Recall	The call is recalled from Transfer.
blank ("" )	blank ("" ) - the reason for the call is not known.
Emergency	(Call displays in red) The call is an emergency call.
Line Group	The call is call from the line group.
LG nnn	Line Group with Line Group number.
ParkRCallDN	Park Recall with Recall DN/Orbit No.
TransfRCallDN	Transfer Recall with Redirect DN.
TransfDN	Transfer with Redirect DN.
<b>Time</b>	Time that the call has been in the current call state.
<b>Name</b>	Name of person calling (inbound calls) or person called (outbound calls).
<b>Number</b>	Phone number of person calling (inbound calls) or person called (outbound calls).
<b>Duration</b>	Total time of a call.
<b>Line</b>	Line number of external calls.

# Index

---

## A

- about this book
  - conventions, [vi](#)
  - related documents, [vii](#)
- activate incoming call, [49](#)
- add new user icon, [7](#)
- administration, [47](#), [48](#), [50](#)
- administration view
  - admin tab, [48](#)
  - primary/alternate tab, [48](#)
  - user and dept. tab, [48](#)
- alternate
  - call pickup, [22](#)
  - door phone, [23](#)
  - page zone, [21](#)
  - park, [25](#)
- answer
  - icon, [7](#)
  - key, [3](#)
- arrow keys, [5](#)
- attendant keys, [3](#), [4](#)
- automatic
  - dialing, [49](#)
  - hold, [49](#)
- auto park, [25](#)

## B

- backup log files, [55](#)
- backup log files icon, [7](#)
- BLF
  - show tab, [48](#)
- BLF/DSS tab, [14](#)
- BLF network control tab, [52](#)
- BLF refresh rate, [49](#)
- BLF sorting tab, [54](#)
- blind transfer, [18](#), [49](#)
  - from BLF tab, [15](#)
  - icon, [7](#)
  - key, [3](#)
- broken database, [27](#)
- busy override, [13](#)
- buttons
  - extension, [vi](#)
  - settings, [40](#)

## Index

C ~ F

### C

- call
  - back, 13
  - completion, 12
  - conference, 19
  - forward, 26, 38
    - settings, 39
  - history, 12
  - making a call, 12
  - monitor view, 6
  - park, 25
  - pickup, 22
  - statistics view, 44
  - transfer, 18
- called number, 49
- caller ID, 49
- call forward, 27
  - create menu items, 40
- call park (enable), 50
- call pickup (enable/assign), 50
- call statistics, 8, 43
- cancel
  - cancel msg waiting icon, 7
  - message waiting, 13
- CF (see call forward)
- changing status, 26
- conference, 19
  - release last party, 20
- console
  - overflow, 38
  - status, 27
- consultation transfer, 7, 15, 18
- ConsultHold, 18, 57
- contact tab, 31
- control panel view, 38
- CSTA, 2

### D

- database link, 26, 27
- date/time, 38
- date and time, 26, 38
- day, day 2, or night mode, 26
- destination, 20
  - icon, 7
- destination key, 4
- dest key, 4
- dial
  - directory, 16
  - icon, 7
  - key, 4
- dial a number, 12
- directory lists, 36, 54
- directory tab, 16
- door phone
  - calling, 23
  - icon, 7
- door phones and locks (assigning), 50
- door unlock, 24
- DTMF, 49

### E

- emergency page, 21
- error message, 27
- executive override, 13
- export directory list, 36
- ExportToExcel, 8
- extension number, vi

### F

- F11 key, 5
- F12 key, 5
- F1 key, 5
- feature keys tab, 42
- flash, 49



## **H**

help key, [5](#)  
hold  
    a call, [17](#)  
    ConsultHold, [57](#)  
    icon, [7](#)  
hold/retrieve key, [3](#)

## **I**

icons, [7](#)  
    add new user, [7](#)  
    answer, [7](#)  
    backup log files, [7](#)  
    blind transfer, [7](#)  
    cancel msg waiting, [7](#)  
    consult transfer, [7](#)  
    destination, [7](#)  
    dial, [7](#)  
    door phone, [7](#)  
    hold, [7](#)  
    join/split, [7](#)  
    paging, [7](#)  
    park, [7](#)  
    pickup, [7](#)  
    reconnect database, [7](#)  
    release, [7](#)  
    set msg waiting, [7](#)  
    source, [7](#)  
    unlock door, [7](#)  
    user directory, [33](#)  
    views, [6](#)  
    voice mail transfer, [7](#)  
import  
    directory list, [36](#)  
info bar, [8](#)  
IP address, [52](#)

## **J**

join, [19](#)  
join/split  
    icon, [7](#)  
    key, [4](#)

## **K**

keypad, [3](#)  
keys  
    answer transfer (blind), [3](#)  
    dest, [4](#)  
    dial, [4](#)  
    help, [5](#)  
    hold/retrieve, [3](#)  
    join/split, [4](#)  
    next tab, [4](#)  
    release, [3](#)  
    source, [4](#)  
    transfer (supv.), [3](#)  
    transfer to VM, [3](#)  
    vol dn, [5](#)  
    vol up, [5](#)

## **L**

login, [9](#)

## **M**

making a call, [12](#)  
menu bar, [7](#)  
messages tab, [21](#)  
message waiting, [29](#)  
    cancel, [13](#)  
    icon, [7](#)  
    msg light, [28](#)  
multiple attendants, [49](#)

## Index

*N ~ R*

### N

- network control, [52](#)
- next tab key, [4](#)
- next view
  - key, [4](#)
- night mode, [26](#)
- night transfer, [38](#)
- numeric keypad, [3](#)

### O

- overflow, [26](#), [38](#)
- override
  - busy, [13](#)
  - executive, [13](#)

### P

- page zone
  - alternate, [21](#)
  - emergency, [21](#)
  - primary, [21](#)
- paging, [21](#)
  - icon, [7](#)
- paging zones (assigning), [50](#)
- park
  - a call, [25](#)
  - alternate, [25](#)
  - icon, [7](#)
  - primary, [25](#)
  - retrieve, [25](#)
- park (enable), [50](#)
- park page, [25](#)
- pickup, [22](#)
  - alternate, [22](#)
  - icon, [7](#)
- pickup (enable/assign), [50](#)
- port, [52](#)

- position

- active, [26](#)
  - busy, [26](#), [49](#)

- primary

- call pickup, [22](#)
  - door phone, [23](#)
  - page zone, [21](#)
  - park, [25](#)

- primary/alternate tab, [50](#)

- print, [8](#)

- prompt/notes tab, [11](#)

- prompts tab, [41](#)

### R

- reconnect database, [27](#)

- icon, [7](#)

- redial the last number, [12](#)

- refresh rate, [52](#)

- BLF, [49](#)

- release

- a call, [11](#)
  - icon, [7](#)

- release key, [3](#)

- release last party, [20](#)

- retrieve

- a parked call, [25](#)
  - key, [3](#)

- retrieve a parked call, [25](#)

- retrieve parked call, [25](#)

- ring mode, [13](#)

## S

- set msg waiting icon, 7
- settings button, 40
- setup conference, 18
- source, 20
  - icon, 7
  - key, 4
- special function keys, 4
- speed dial, 13
  - (also see feature keys tab)
- split, 19
  - icon, 7
  - key, 4
- station park, 25
- status, 38
- supervised transfer, 18
- swap, 20
- switch between source/destination parties, 20

## T

- tabs
  - administration
    - admin, 48
    - primary/alternate, 50
    - user & dept., 51
  - BLF/DSS, 14
  - contacts, 31
  - directory, 16
  - feature keys F2~F10 keys, 42
  - messages, 21
  - prompt/notes, 11
  - prompts, 41
- time, 26
- time/date, 38
- tone/voice, 13
- tool bars, 7

- transfer, 3, 15, 18
  - blind, 18
  - blind key, 3
  - supv., 18
- transfer (supv.) key, 3
- transfer to VM, 19
  - key, 3

## U

- unlock door
  - alternate, 24
  - icon, 7
  - primary, 24
- user & dept. tab
  - administration, 51
- user directory view, 33

## V

- view pane, 6
- views
  - administration, 47
  - call monitor, 6
  - call statistics, 43
  - control panel, 38
  - controls, 6
  - user directory, 33
- voice mail transfer, 19
  - icon, 7
- vol dn key, 5
- volume, 5
- vol up key, 5

